
Details

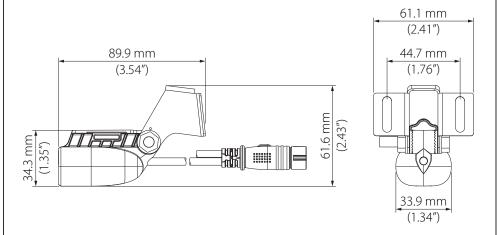


Environmental		
Operating temperature	-15°C to +55°C (+5°F to +131°F)	
Storage temperature	-30°C to +70°C (-22°F to +158°F)	
Physical		
Weight	0.24 kg (0.544 lbs)	
Cable length	6 m (20 ft)	
Mounting options	Transom or trolling motor	
Number of pins	6 pins (combined unit power and sonar cable)	
Sonar		
Output	Depth and temperature	
Frequency	200 kHz	
Beam width (@ -3dB)	44° @ 200 kHz	
Max depth	152 m (500 ft) @ 200 kHz	
Max speed	57 knots (55 mph)	

LOWRANCE°

BULLET SKIMMER TRANSDUCER

INSTALLATION GUIDE

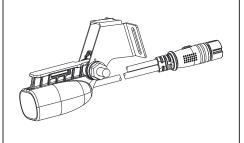





For product manuals, technical specifications, certificates and declarations refer to the product website:


www.lowrance.com






Parts included


- 1. Transducer with cable
- 2. Transom mounting kit
 - 1x bolt and locking nut
 - 2x metal washers
 - 2x rubber washers
 - 1x bracket and ratchet
 - 2x self-tapping screws

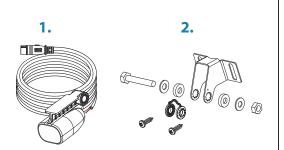

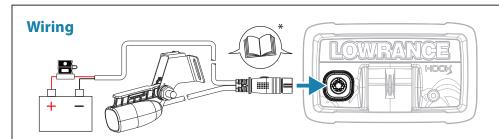

* For power and display installation refer to seperate documentation.


Mounting guidelines

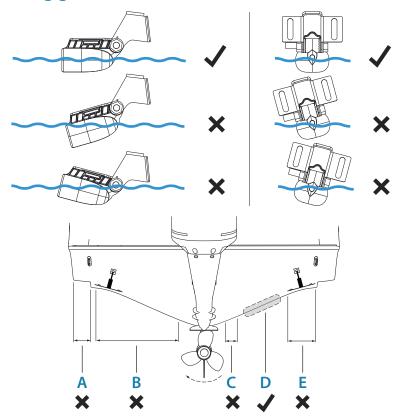

- A. Planing strake avoid mounting
- B. Avoid mounting within 1 m (3.3') to port (left) of propeller
- C. Avoid mounting within 7.5 cm (3") to starboard of propeller
- D. Best mounting location undisturbed water flow
- E. Trim tabs can cause turbulence avoid mounting


Note: Example above describes a conventional clockwise propeller rotation configuration. Mirror the example if your boat has a counterclockwise propeller rotation configuration.

Note: If the transducer is not placed in a smooth flow of water, interference caused by bubbles and turbulence may show on screen in the form of random lines or dots. The unit could also lose bottom signal when the boat is on plane. The sonar will not work while the transducer is out of the water.

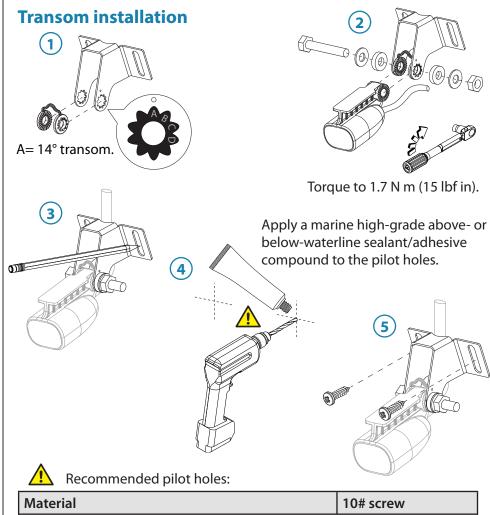

Material	10# screw
Soft materials e.g. Plywood	Ø 3.7-4.0 mm (5/32")
Hard materials e.g. Fiberglass, Acrylic, Hardwoods	Ø 4.1-4.7 mm (3/16")

Trolling motor installation*

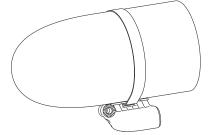

*Hose clamp not included.