

Operating under the theory that an ounce of prevention is worth a pound of headaches, here is a helpful hint that will prevent any scratching during the Addict Tower assembly.

As you are removing the 4 arms and top center section out of the box, place masking tape strips around the top conjunction sections of the tubes that slide inside. This will let you move and adjust the front tower tubes without scratching the finish. But please use caution when sliding the sections together.

Keep the masking tape in place through the final assembly step, then, after drilling, remove the masking tape and your finish will be perfect.



Note that this installation guide is only a guideline. Each boat is different and improvisation is needed to mount your Addict tower on your boat.

Contents of Box

Unpack the carton, there will be 5 sections:

Tower Mount set

Tower Bars

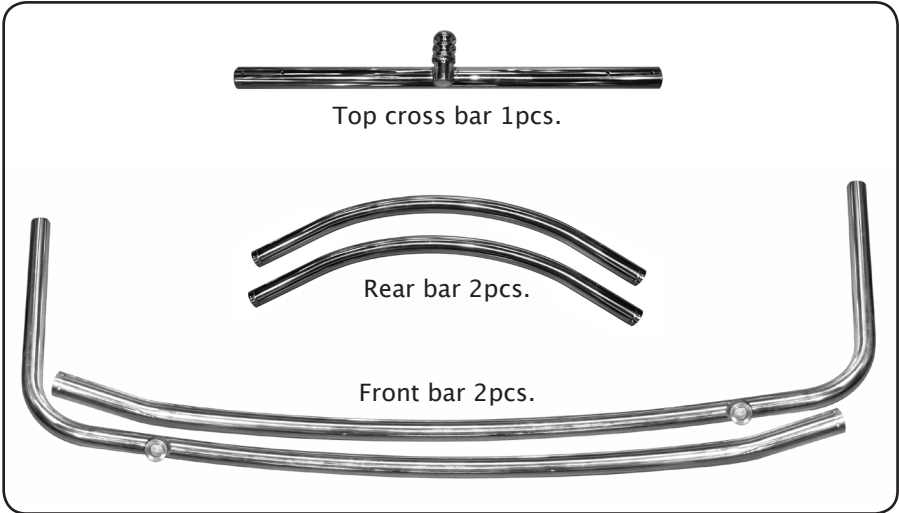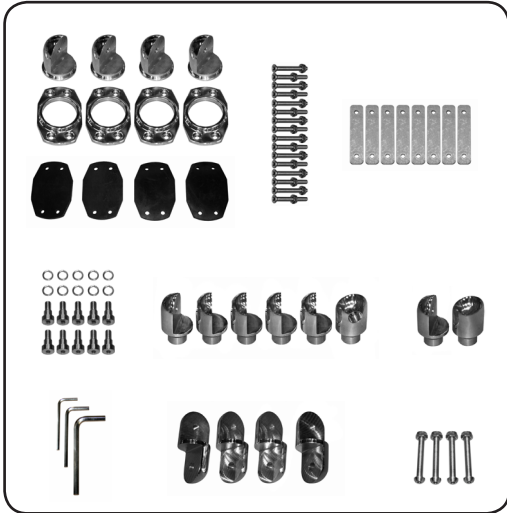

Prior to assembly, make sure all the required parts are present.

Necessities :


- Electric Drill
- Drill bit size 6
- Drill bit size 10
- Fork wrench size 10
- Masking tape
- Chamfer drill bit
- First decide if you want to do a top mount or a side mount.

Step 1

With masking tape cover the area where the mounting brackets will be placed. This should be done at all points where the tower will contact and the near surrounding area. This will help eliminate scratches to your boat while adjusting and measuring your tower attachment points.

Step2

Connect the front bar with the rear bar using the connectors : see drawing.

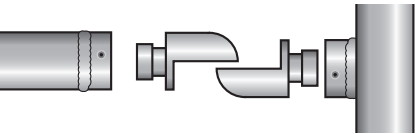

Step 3

Use the semi-assembled tower to determine the correct position on the boat. Place the parts beside the boat to see what it will look like. Bear in mind the height in the boat,



1a. Mask Mounting Area



the windscreen window, additional tower accessories, wiring etc etc... The closer the front and the rear mounts are placed together, the higher the tower will be. On boats that already have an existing ski pole (or preparation) the best thing to do is center the tower towing point above the existing towing point. When you have determined the correct position mark the position on the masking tape using the mounting brackets. !Make sure the mounting brackets are mounted completely level!




TIP : start +/- 20cm in front of the windscreen to determine the correct position. This for possible mirror mount on the tower.

Step 4

After marking one side you can mark the other side using the mounting brackets.

Step 5

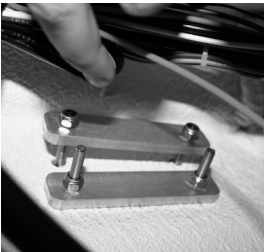

Before drilling inspect the underside of these locations for obstructions such as wires or cables, also check the accessibility. You are now ready to drill the holes. For this use the drill bit size 6. After drilling the 16 holes, it is recommended to chamfer the holes using the chamfer drill bit, this to prevent the gelcoat from cracking.

Step 6



Remove the masking tape and mount the mounting brackets with the rubber gasket. Also mount the bar assembly on the mounts as you can see in the pictures. Don't fasten the screws at this time.


Step 7

Mount the front bar and the rear bar on the assembled mounting brackets, after that slide the top cross bar on the front bar with the towing point facing backwards.



Step 8

On the other side of the boat, slide the front bar in the top cross bar and attach it to the mounting bracket, after that you can also connect the rear bar to the mounting bracket. Make sure that the tower is in the correct position and that the towing point is centered and facing upwards.

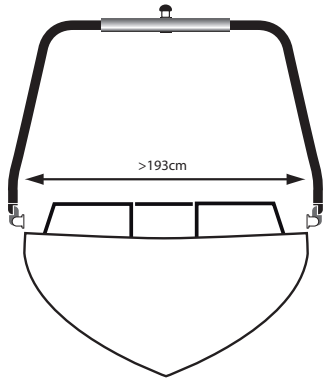

Step 9

If the tower is in the correct position you can fasten all the bolts and screws.



Step 10


Finally fasten the top cross bar. In order to do this you have to drill holes through the top cross bar (these are predrilled) and the front bar, then fasten it with the 4 big bolts & nuts.

How to fold the tower

- I. Disconnect tower from front mounts
- II. Loosen the rear mounts
- III. Fold tower back to down position.

Care and Maintenance

- I. Be sure to check and tighten all fasteners and connections prior to every use.
- II. Be cautious when towing or driving under obstacles, low hanging structures or trees with your tower on.
- III. Use soap and water or general cleaners to clean your tower. Avoid abrasive materials that might scratch the tower's finish.
- IV. Always rinse tower after contact with salt (brackish) water.

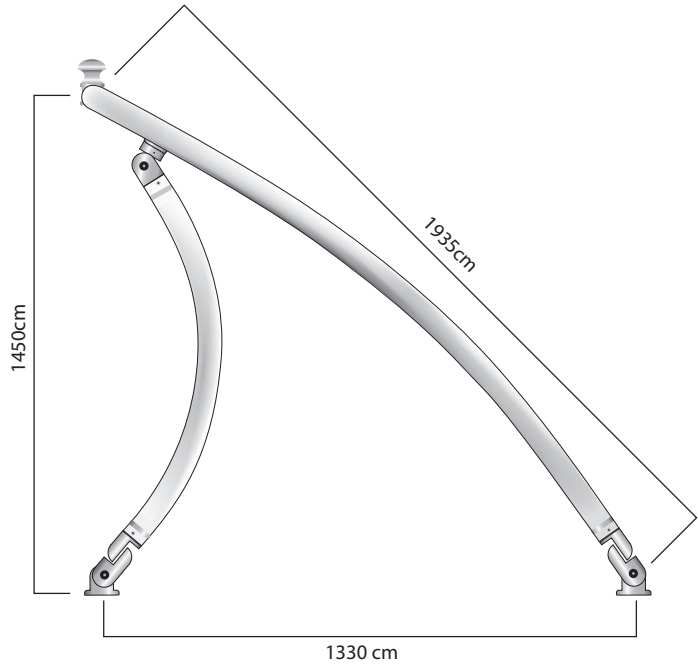

JOBE Addict Tower Warranty

Jobe Sports Europe warrants this product (not including other 3rd party accessories) against manufacturers defects. Anodizing and powder coated surfaces as well as all hardware corrosion are specifically excluded as their care and use cannot be controlled by Jobe Sports Europe. Any modifications or improper use shall void this warranty. Jobe Sports Europe is not responsible for personal injury or damage to the boat caused by the use of this tower. JOBE's obligation under this warranty shall not include any transportation charges or costs of installation or any liability for direct, indirect or consequential damages resulting from delay or improper installation. No dealer, retailer or manufacturer is the agent of Jobe Sports Europe and may not assume for Jobe Sports Europe any liability in connection with this warranty. This warranty is in lieu of all.

Distributed by:
Jobe Sports Europe
Heerewaardensestraat 30
6624 KK Heerwaarden
The Netherlands

WWW.JOBESPORTS.COM



INSTALLATION GUIDE

Check WWW.JOBESPORTS.COM for other languages of this manual

