

You are now ready to square up and center the loose assembly. Have someone stand in front of the boat and determine that the ski pylon is centered and the tower arms are symmetrical. Make any adjustments..

Drill through the predrilled holes in the center section from each side with 3/8" drill bit and install bolts and cap nuts. One person will still be stabilizing the tower through this step.

Tighten all hardware for completion of tower installation.


How to fold the tower

- I. Disconnect tower from front mounts (A).
- II. Loosen the rear mounts (C)
- III. Fold tower back to down position.
- IV. Remove bolts from top section (B) and collapse tower to flat.



Care and Maintenance

- I. Be sure to check and tighten all fasteners and connections prior to every use.
- II. Be cautious when towing or driving under obstacles, low hanging structures or trees with your tower on.
- III. Use soap and water or general cleaners to clean your tower. Avoid abrasive materials that might scratch the tower's finish.
- IV. Always rinse tower after contact with salt (brackish) water.

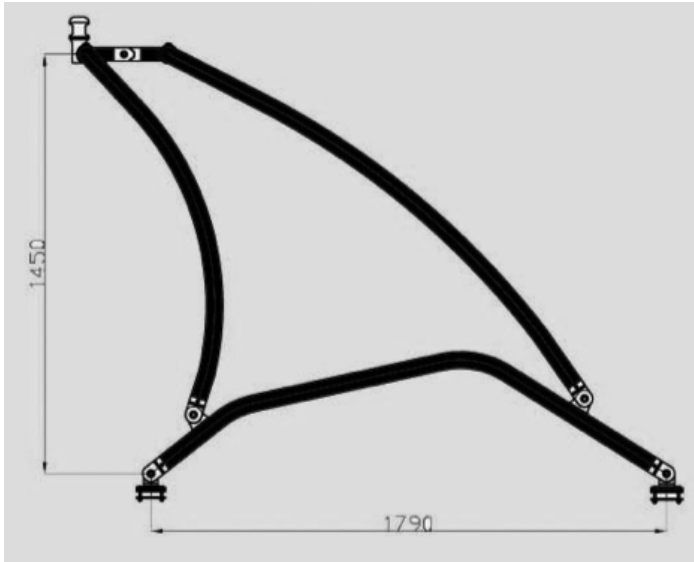

JOBE Addict Tower Warranty

Jobe Sports Europe warrants this product (not including other 3rd party accessories) against manufacturers defects. Anodizing and powder coated surfaces as well as all hardware corrosion are specifically excluded as their care and use cannot be controlled by Jobe Sports Europe. Any modifications or improper use shall void this warranty. Jobe Sports Europe is not responsible for personal injury or damage to the boat caused by the use of this tower. JOBE's obligation under this warranty shall not include any transportation charges or costs of installation or any liability for direct, indirect or consequential damages resulting from delay or improper installation. No dealer, retailer or manufacturer is the agent of Jobe Sports Europe and may not assume for Jobe Sports Europe any liability in connection with this warranty. This warranty is in lieu of all.

Distributed by:
Jobe Sports Europe
Heerewaardensestraat 30
6624 KK Heerwaarden
The Netherlands


WWW.JOBESPORTS.COM



04-2008

INSTALLATION GUIDE

Check WWW.JOBESPORTS.COM for other languages of this manual

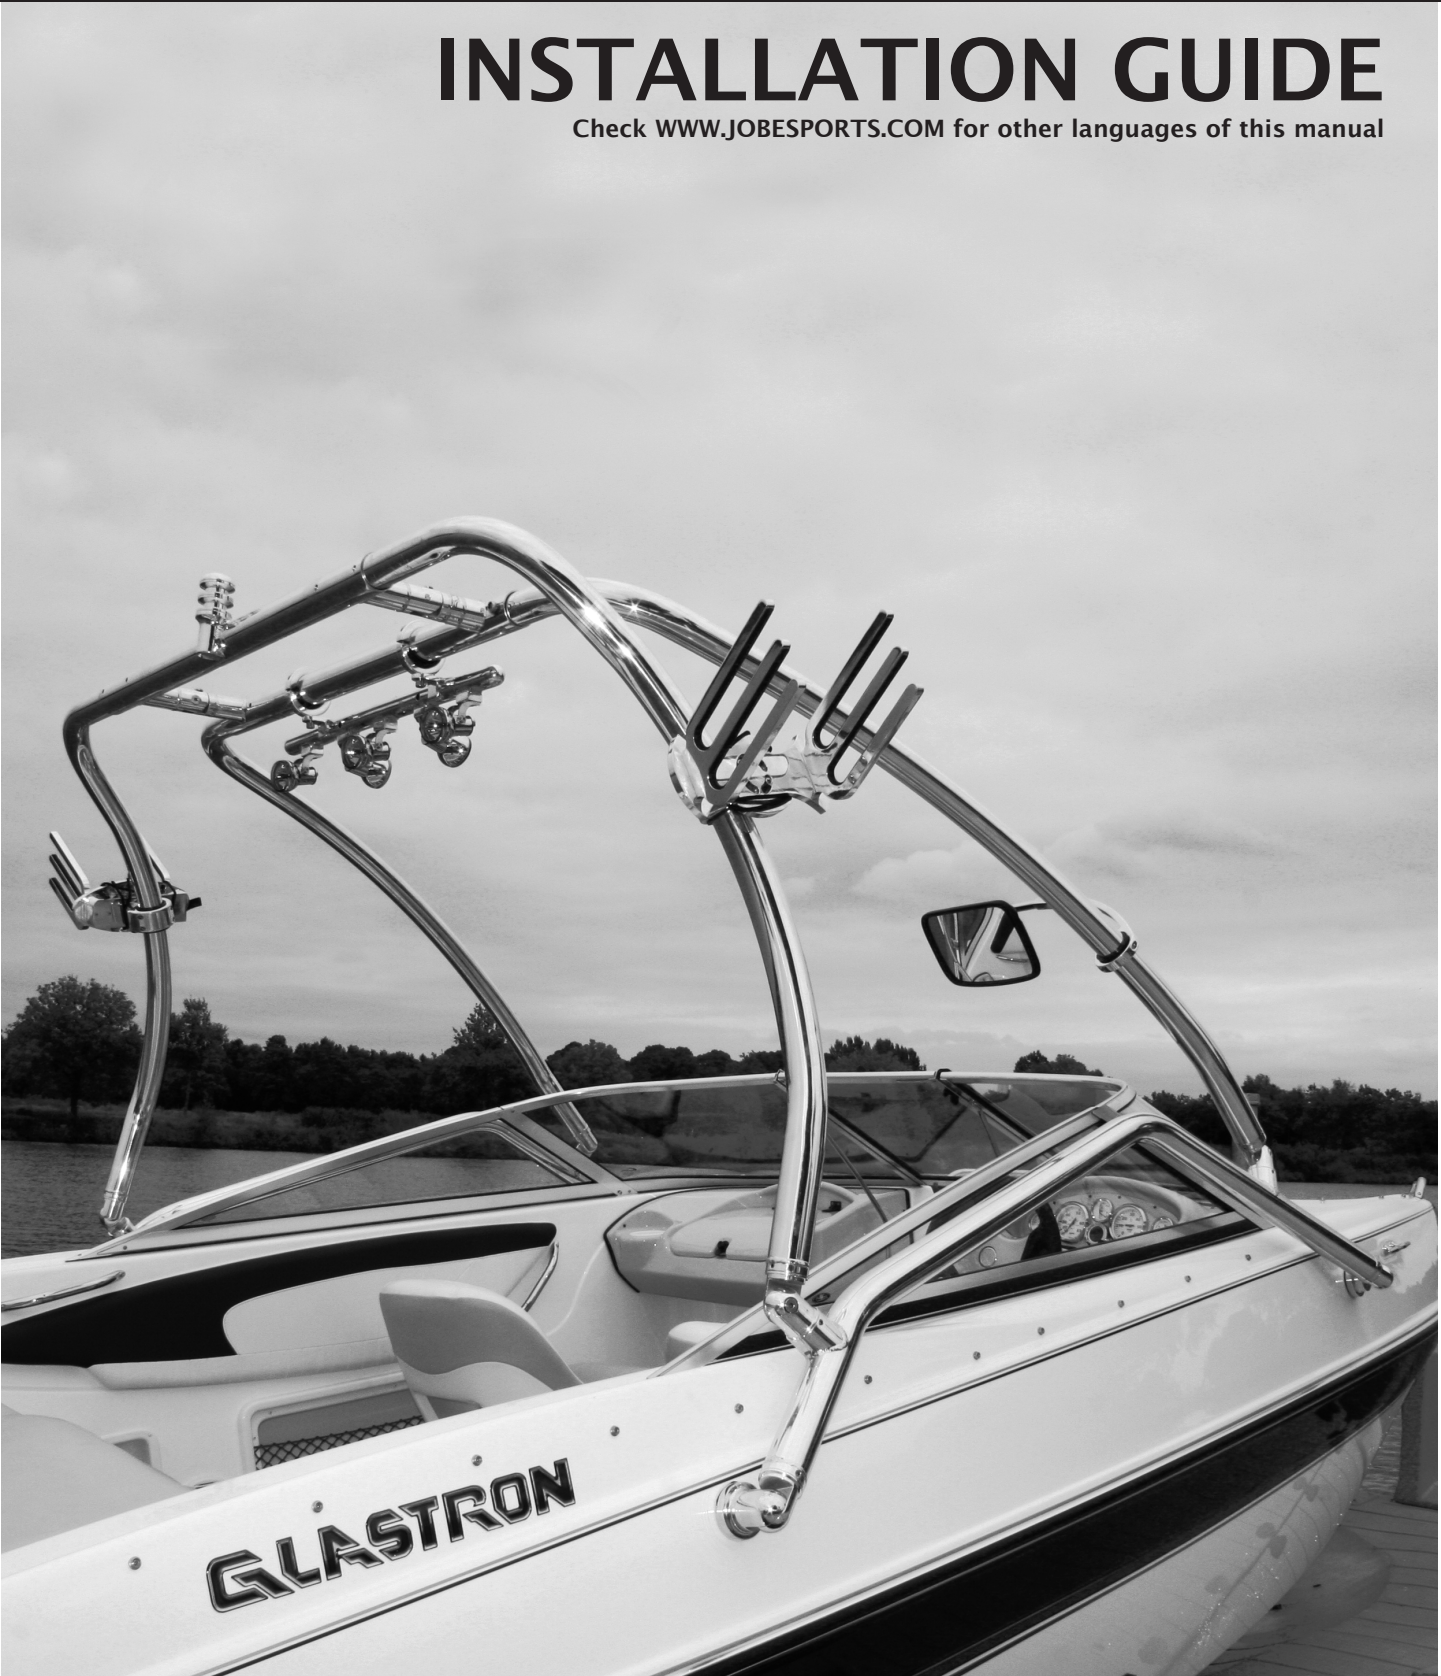

Operating under the theory that an ounce of prevention is worth a pound of headaches, here is a helpful hint that will prevent any scratching during the Addict Tower assembly.

As you are removing the 4 arms and top center section out of the box, place masking tape strips around the top conjunction sections of the tubes that slide inside, and you will need to duplicate this process for both the front and rear. This will let you move and adjust the front and rear tower tubes without scratching the finish. But please use caution when sliding the sections together.


Keep the masking tape in place through the final assembly step, then, after drilling, remove the masking tape and your finish will be perfect.

Note that this installation guide is only a guideline. Each boat is different and improvisation is needed to mount your Addict tower on your boat.

Contents of Box

Unpack the carton, there will be 7 sections:

Hardware

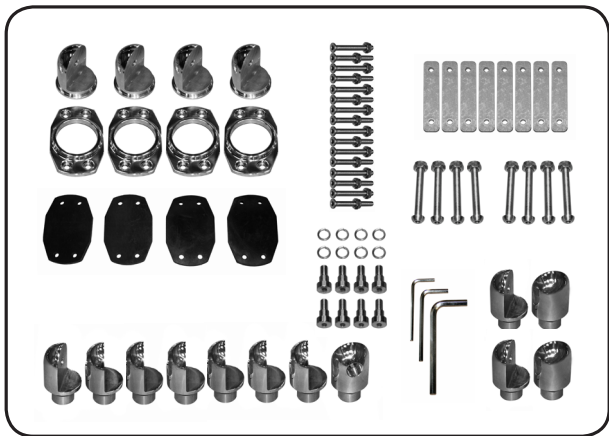

Tower mount

Tower Bars
Top cross bar 1pcs



Front bar 2pcs



Rear bar 2pcs



Bottom bar 2pcs.


Step 1: Install the bottom bar on the boat

Put the bottom bar on the proper position according to your boat, and mark the EXACT position. With masking tape cover the area where the mounting brackets will be placed. This should be done at all points where the tower will contact and the near surrounding area.



Mask mounting area

Now you can start drilling for the mounts. Before drilling, inspect the underside of these locations for obstructions such as wires or cables. Using the rubber mount gasket, drill 4 holes where marked with a 1/2" drill. After drilling hole, chamfer outer edges of hole. This will prevent gel coat stress cracks.

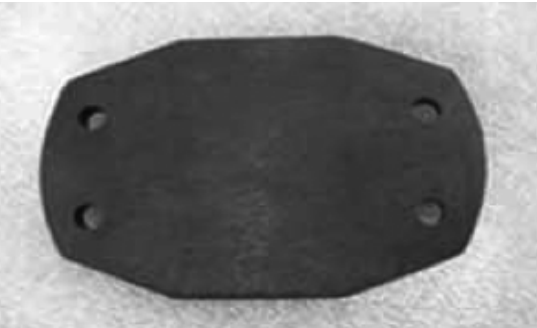

Use the rubber mount gasket to drill 4 holes


Install the bottom bars with the MOUNT SET. All feet are swivel and can work with various mounting angles. Note to mount the bottom bar vertical. When you fail to mount the bottom bar vertical, you will not be able to fold the tower. Snug the bolt but do not fully tighten at this time.



The rear feet is swivel

Step 2: Install the top tower on the bottom bars.

1. The Addict 1.3 Tower is designed to fit all boats from narrow to wide beam. On narrow beam boats the front and rear bars may need to be cut. To determine this, you can measure the distance between the two bottom bars where the rear bar will be fixed.

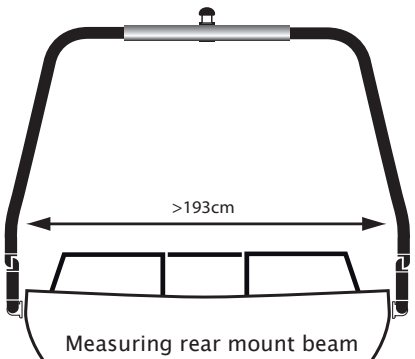

Assemble the tower 4 arms and top section on the ground. **You will not be drilling any holes in the tower at this point.** Lift the 4 arms to standing position, and measure the distance between the two rear mount and know if you need to cut the bars.



Lift the 4 arms to standing position

Assemble the top tower on the bottom bars with MOUNT SET, all mounts are swivel to work with various mounting angles. Snug the bolts but do not tighten at this time

